



# ALPHA WAVE NARROWBAND RADIO MODEMS WIRELESS SOLUTIONS

ArWest Communications Corp. 900 Rock Avenue, San Jose, CA 95131  
Tel+1 408 770 17 90 Fax: +1 408 770 17 99 E-mail: sales@arwestcom.com  
© 2010 ArWest Corp. ArWest is a registered trademark of ArWest Corp  
[www.arwestcom.com](http://www.arwestcom.com)

## L-Band/Beacon OEM Receiver



For operation manual and other technical documents please see links below. To update your receiver now (and frequently later) please visit our website and download the latest firmware.

Here are links to the L-Band/Beacon OEM Receiver firmware, documentation, and utilities:

- L-Band/Beacon Receiver Newest Firmware Version

[http://www.arwestcom.com/firmware/FW\\_L-Band\\_Beacon\\_OEM.zip](http://www.arwestcom.com/firmware/FW_L-Band_Beacon_OEM.zip)

- L-Band/Beacon Receiver User Manual

[http://www.arwestcom.com/doc/L-Band\\_Beacon\\_OEM\\_Receiver\\_User\\_Manual.pdf](http://www.arwestcom.com/doc/L-Band_Beacon_OEM_Receiver_User_Manual.pdf)

- L-Band/Beacon Receiver Data Sheet

[http://www.arwestcom.com/doc/L-Band\\_Beacon\\_Receiver\\_OEM\\_Datasheet.pdf](http://www.arwestcom.com/doc/L-Band_Beacon_Receiver_OEM_Datasheet.pdf)

- AWLaunch (Modem Configuration Software) free

<http://www.arwestcom.com/doc/AWLaunch.zip>

- AWLaunch Software Manual



[http://www.arwestcom.com/doc/AWLaunch\\_Software\\_Manual.pdf](http://www.arwestcom.com/doc/AWLaunch_Software_Manual.pdf)

# L-Band/Beacon Receiver

## Support Inquiries

The support area of the website [www.arwestcom.com](http://www.arwestcom.com) provides access to frequently asked questions, configuration procedures, manuals, e-mail support, etc. Should you have any problems with L-Band/Beacon OEM Receiver, please contact ArWest Customer Support [support@arwestcom.com](mailto:support@arwestcom.com). Generally, you will receive a response within 24 hours or less, depending on the severity of the problem.

PIN #	Signal Designator	Signal name	Description	I/O	Comments
1	GND	GND	Ground	-	Signal and Chassis Ground
2	DSP UART 1	TXD	Transmitted Data	TTL Input	Serial Data Input
3	DSP UART 2	RXD	Received Data	TTL Output	Output for received serial data
4	DPORT5	DTR or DP/MP	Data Terminal Ready	TTL Input	Control line can be used as a backup method for entering Command mode; (0V to 3.3V) transition: Maintenance Mode ; (3.3V to 0V) transition : Data Mode An internal 100K pull-up enables Data Mode if this signal is left unconnected. Maintenance Mode is also accessible by transmitting an escape sequence.
5	DPORT1	CTS	Clear to Send	TTL Output	Used to control datat flow from the user to the radio: (0V) –Datat buffer not full, (3.3V) – Data buffer full
6	TTL1	SLEEP	Sleeps/ wakes radio Receive only	TTL Input	In sleep mode, all radio functions are disabled consuming less than 50µA. An internal 10K pull-down wakes up the radio if this signal is left unconnected. At wake up, any user programmed configuration settings are refreshed from flash memory, clearing any temporary settings that may have been set: (3.3V) – Sleep Radio; (0V) – Wake Radio As an option could be used as TTL Input Line 1.
7	DPORT3	DCD	Data Carrier Detect	TTL Output	Used by remotes to indicate that the remote has successfully acquired the signal from base station: (0V) – Carrier detected (synchronized); (3.3V) – No carrier detected (not synchronized)
8	DPORT4	RTS	Request to Send	TTL Input	Gates the flow of receive data from the radio to the user on or off. An internal 10K pull-down enables data receive if this signal is left unconnected. In normal operation, this signal should be asserted: (0V) – Receive data (Rx) enabled (3.3V) – Receive data (Rx) disabled
9	DPORT2	DSR	Data Set Ready	TTL Output	Used to control data flow from the user to the radio: (0V) – Receive buffer has data to transfer; (3.3V) – Receive buffer is empty
10	ANT_DC	ANT_DC	Ext.Power for Antenna LNA	Power Input	External Power for Antenna LNA +5...+15 VDC
11	TTLO1	TTLOUT1	TTL Output Line 1	TTL Output	Reserve line
12	TTLO2	TTLOUT2	TTL Output Line 2	TTL Output	Reserve line
13	GND	GND	Ground	-	Signal and Chassis Ground
14	TTL2	TTLIN	TTL Input line	TTL Input	An internal 100K pull-up resistor is applied.
15	VCC42	PWR	Power Supply	External	Regulated positive 4.2V DC from ext. Power Supply
16	VCC42	PWR	Power Supply	External	Regulated positive 4.2V DC from ext. Power Supply

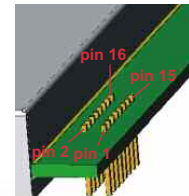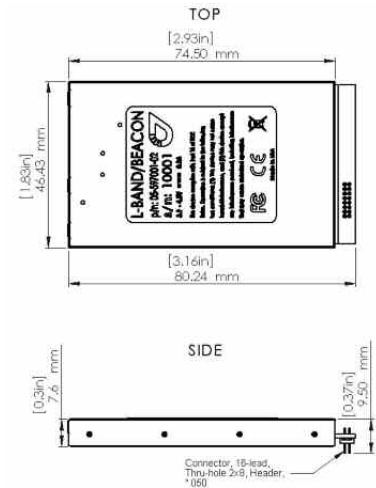

## Read this First